

Seats, Heated Rear , (9AK),(Q1A),(Q1D),(Q4Q),(4A4)

From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Seat Heating Control Module

J882 Seat Heating Control Module
 SB1 Fuse 1 (On Fuse Panel B)
 ST1 Fuse Panel 1
 SF11 Fuse 11 (On Fuse Panel F)
 T16d 16-Pin Connector

375 Ground Connection 10 (in Main Wiring Harness)


377 Ground Connection 12 (in Main Wiring Harness)

688 Ground Connection 2 on Center Tunnel

B281 Positive Connection 5 (15a) (in Main Wiring Harness)

B317 Positive Connection 3 (30a) (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions

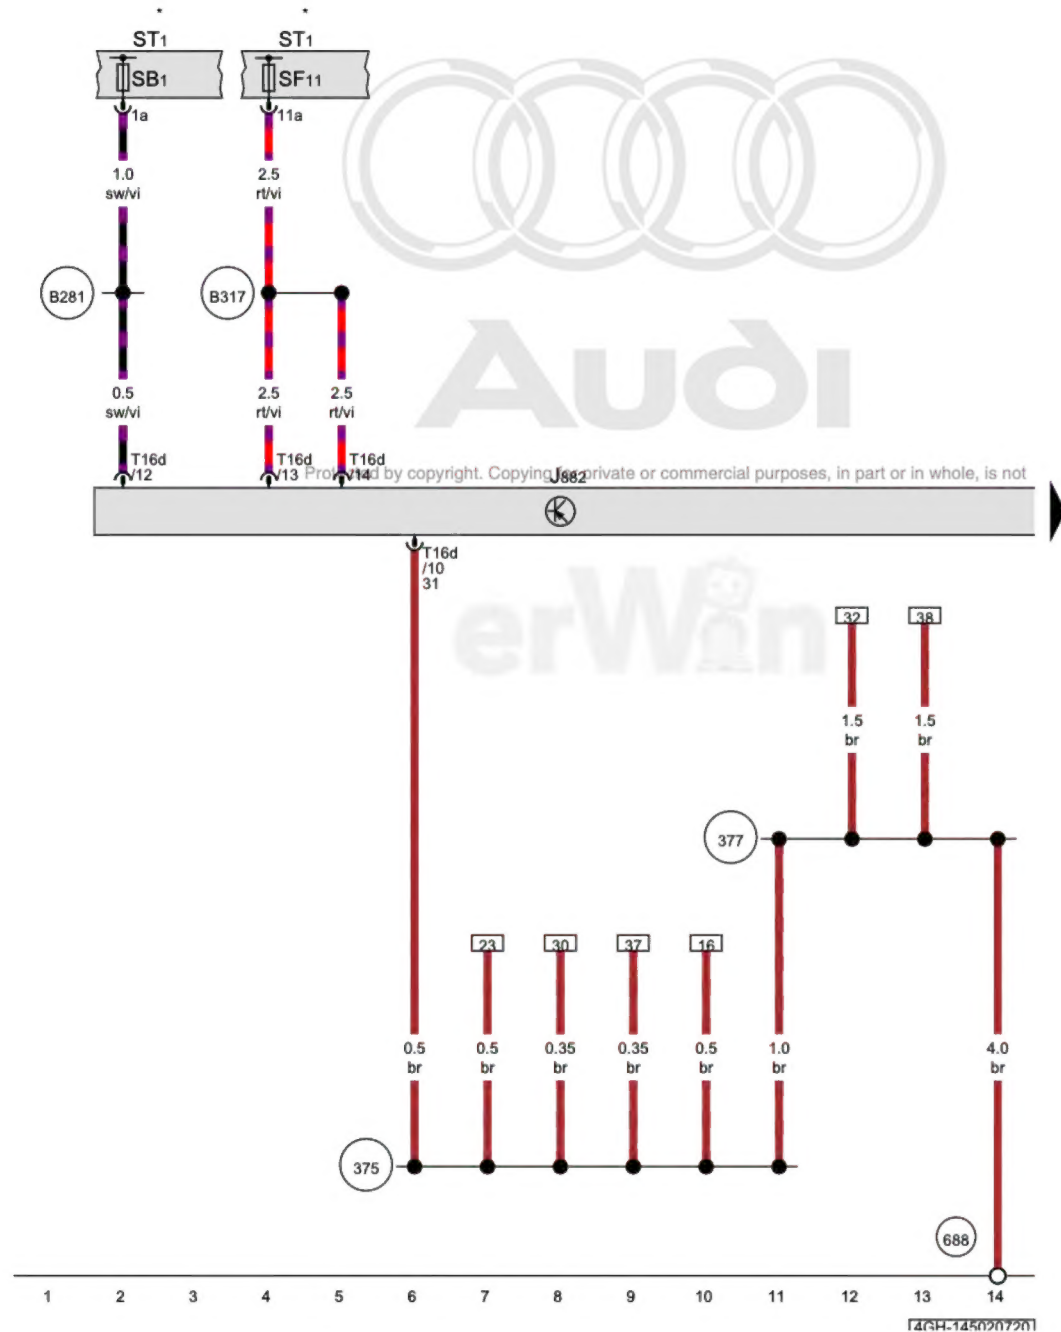

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Left Seat Heating Button, Seat Heating Control Module


- E653 Left Seat Heating Button
- E654 Right Seat Heating Button
- J882 Seat Heating Control Module
- T6bi 6-Pin Connector
- T6bk 6-Pin Connector
- T16d 16-Pin Connector

B645 Heated Seat Connection 2 (in Main Wiring Harness)

B731 Connection 58s (in Main Wiring Harness) 1

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the prior written consent of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

* Climate Control, Basic Climatronic

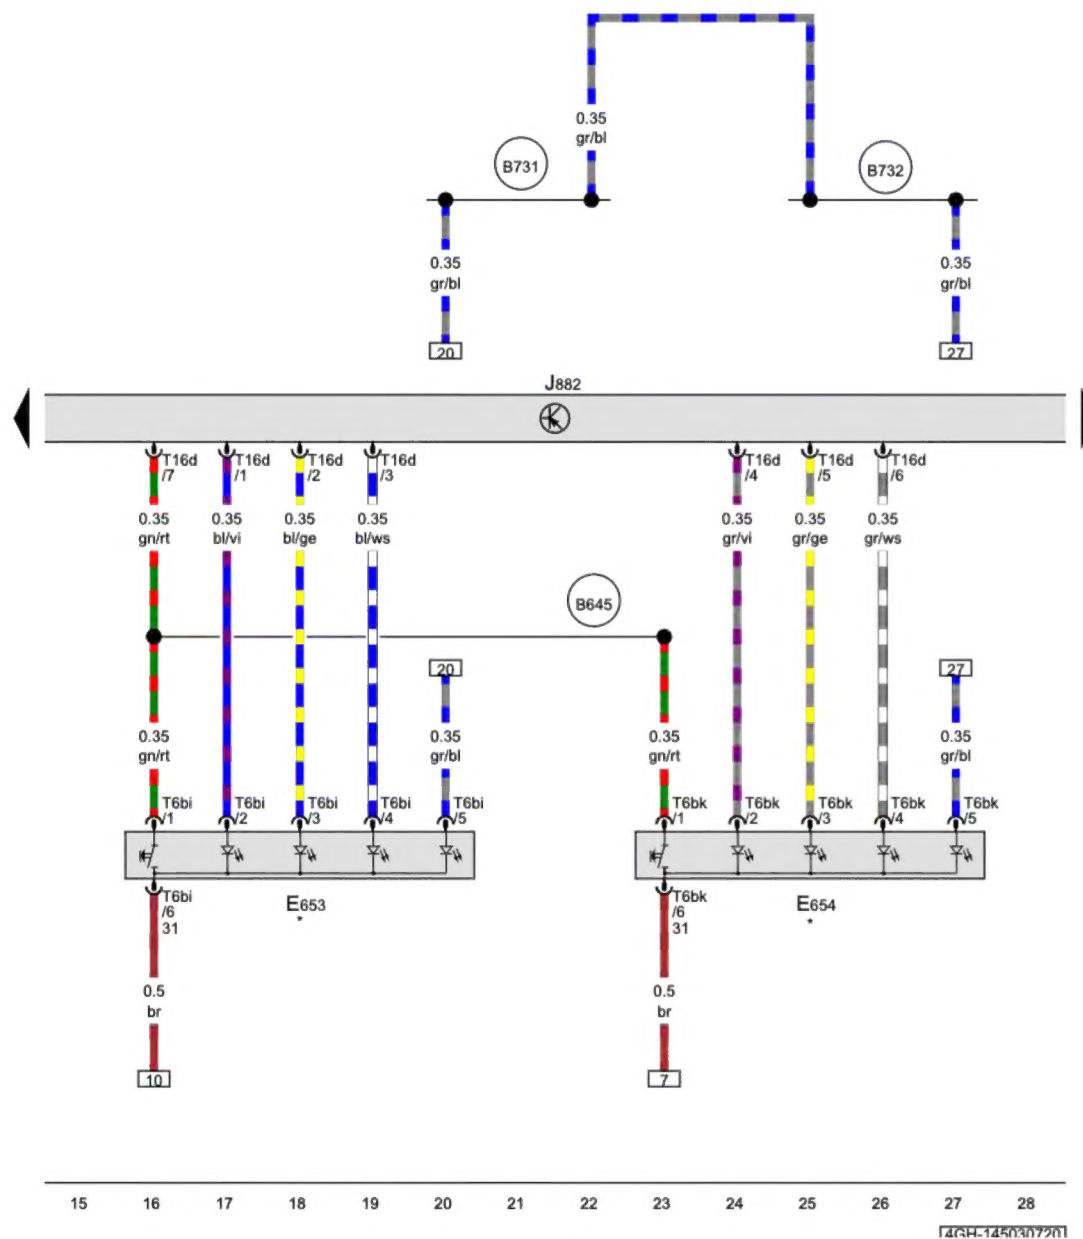

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Seat Heating Control Module, Left Rear Bench Seat Heating Element, Right Rear Bench Seat Heating Element

- G94 Left Rear Heated Seat Temperature Sensor
- G95 Right Rear Heated Seat Temperature Sensor
- J882 Seat Heating Control Module
- T2fm 2-Pin Connector, In the Left Rear Seat
- T2fn 2-Pin Connector, In the Right Rear Seat
- T6t 6-Pin Connector, In the Coupling Point for the Left Rear Seat
- T6u 6-Pin Connector, In the Coupling Point for the Right Rear Seat
- T16d 16-Pin Connector
- Z10 Left Rear Bench Seat Heating Element
- Z11 Left Rear Backrest Heating Element
- Z12 Right Rear Bench Seat Heating Element
- Z13 Right Rear Backrest Heating Element

- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- O12 Connection 1 (in Heated Seats Wiring Harness)
- O13 Connection 2 (in Heated Seats Wiring Harness)
- * Climate Control, Basic Climatronic

